 
 


CARPER - 318

 
DIGITAL MULTI CODE TRANSMITTER.

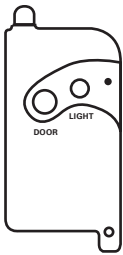

TRANSMITTER
TOP COVER

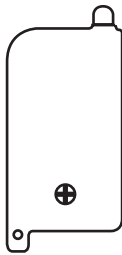

TRANSMITTER
BACK COVER

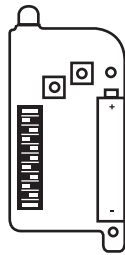

TRANSMITTER WITH TOP
HALF OF CASE REMOVED

(DIAGRAM #1)

FUNCTION DESCRIPTION

 
- 1) Door button: press the button, the garage door operation starts.
- 2) Light button: press the button, you can see objects in the dark.

ACCESSING THE CODE SWITCH AND BATTERY COMPARTMENT

The model 318 CARPER-Transmitter case is composed of 2 halves which can be opened with a screw driver. Once opened you will have access to both the code setting switch and battery compartment (See Diagram #1).

SELECTING A CODE

Set both transmitter and receiver switches to the code of your choice, being sure both are set the same since a different setting of just one switch will prevent operation. The digital code is determined by the position of 9 small switches numbered 1 through 9 located in the receiver and transmitter. Any combination of "on" or "off" positions can be selected by using a pencil or a ball point pen. (Note: The switches are in the "on" position when the switch is depressed toward the number) See Diagram #2.



(DIAGRAM #2)

Once the codes have been set, check the operation and reassemble the transmitter case.

TRANSMITTER INSTALLATION

This transmitter is completely self contained, including battery and can be opened while held in hand, it may be added to your key chain using slot provided.

TRANSMITTER BATTER REPLACEMENT

Replacement battery - 12 volt alkaline lighter battery (Eveready A23 or equivalent). The transmitter battery can be checked or changed by opening the case using a screw driver. Simply slide out the old battery and slide in the new, remembering to observe the battery polarity molded on the case in the bottom of the battery compartment. Note that if the light on your transmitter fails to come on when you press the button, you most likely have a weak or dead battery and it should be replaced (See Diagram #1).

OPERATIONAL CHECK

To check operation, move back a reasonable distance (about 50 ft.) and press the transmitter button. Operation should be reliable at this distance but environment and location of both the transmitter and the receiver will affect the range. Try different locations and positions. If operation is still unsatisfactory, the problem may be solved by:

1. Checking the door operator. If the door will not open when the wall button is pressed, the problem is likely to be the operator. If the door will open by pressing the wall button, but not when the transmitter control button is pressed, the problem is probably in the transmitter.
2. Replacing the transmitter battery. If, after programing the above operational checks, the controls still do not function, they should be returned to your dealer for repair or replacement.

Caution: Any changes or modifications in intentional or unintentional radiators which are not expressly approved by SAM HONG ENG could avoid the user's authority to operate this equipment. This applies to intentional and unintentional radiators certified per part 15 of the F. C. C. rules and regulations.